




Reproductor MP4

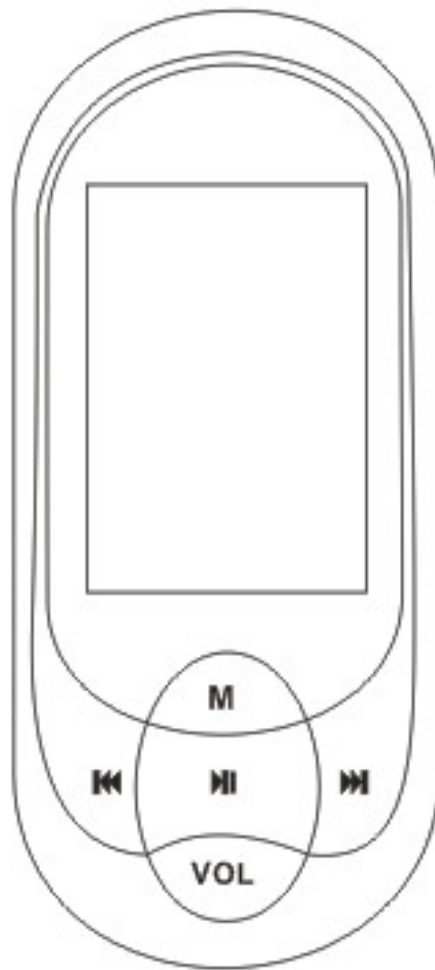

Manual del Usuario
User Manual

Contenido

Características y parámetros	2
Precauciones	3
Carga del reproductor	4
Formateo del reproductor	4
Conexión al ordenador	5
Croquis teclas	6
Pantalla	7
Música	8
Video	9
Radio FM	10
Imágenes	11
e-Libro	12
Grabar	12
Explorador	13
Juego	13
Configuración sistema	14

Características y parámetros

Relación señal ruido >95dB

Potencia de salida 5mW+5mW(32 OHM)

Respuesta en frecuencia 20Hz - 20KHz

Relación de Compresión 65Kbps-320Kbps

Versión USB 2.0

Formatos de reproducción MP2.MP3.WMA

Formato de grabación WAV

Rango FM 87.0mHZ-108.0mHz

Precauciones

No usar o guardar el reproductor en ambientes húmedos o en condiciones de alta temperatura.

La inesperada desconexión durante el formateo, carga o descarga de archivos puede causar la pérdida de datos o daño del reproductor (LEOTEC no es responsable sobre los datos guardados en su reproductor, realice copias de seguridad si la información es importante)

Carga del reproductor

Por favor cargue la batería el reproductor con el adaptador original .

Por la calidad de la batería, cuando se carga por primera vez, cargue la batería después de que se ha agotado. (12 horas de tiempo de la primera carga será mejor) Después de la primera carga, sólo tendrá 4 horas para carga completa .

Cuando el reproductor esté conectado a la computadora mediante un cable USB, se cargará automáticamente. Pero sugerimos no cargar de esta manera por mucho tiempo.

Formateo del reproductor

Seleccione FAT para formatear el reproductor.


Cuando el reproductor se está formateando o transmitiendo archivos es muy importante no desconectarlo.

Conexión al ordenador

Use el cable USB provisto para conectar al ordenador. Después de conectarlo correctamente, la pantalla mostrará el icono de conexión. En este momento usted podría cargar o descargar archivos y música desde el ordenador.

No desconecte el cable USB cuando el reproductor se encuentra transmitiendo datos o música.

Croquis teclas

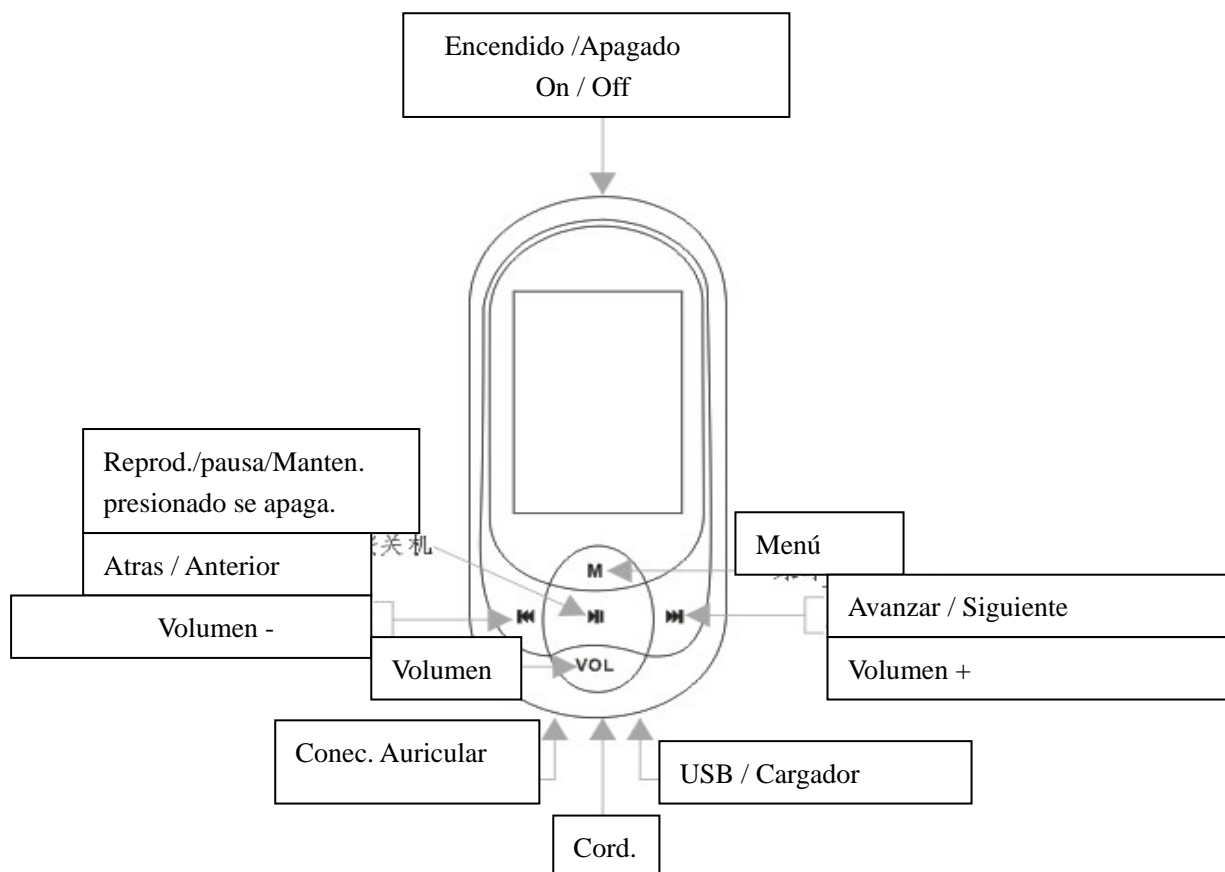

Funciones de cada tecla:



Arriba/Abajo



Ajuste del volumen cuando se encuentra reproduciendo

VOL

Tecla Volumen ; manteniendo presionado aparece menú desplegable con distintas opciones


M

Confirma elección, manteniendo presionado vuelve al menú principal.



Reproducir / Pausa; Manteniendo presionado por 3 segundos, se apaga o enciende dependiendo su estado.

Pantalla

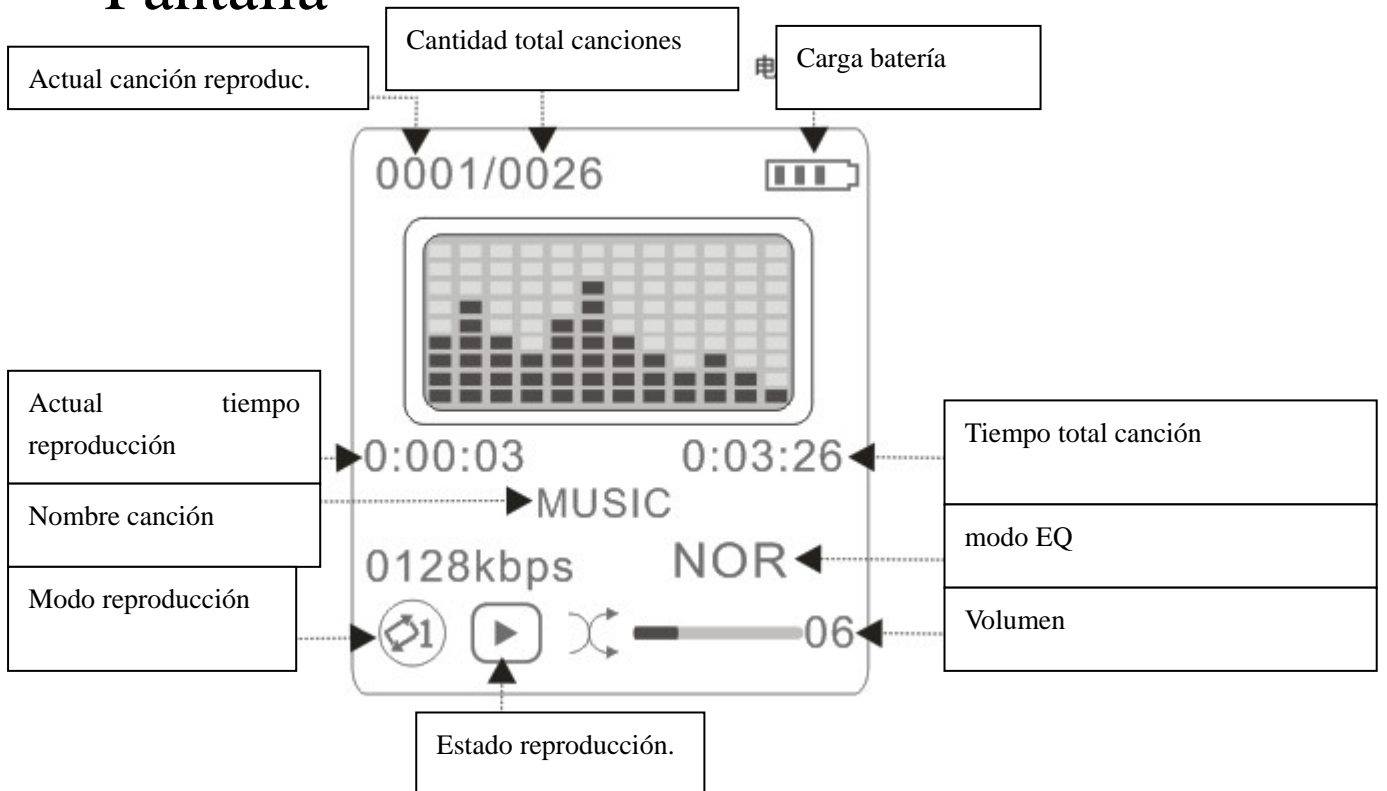

Modo Reproducción

	Simple
	Repetir una
	Lista
	Repetir lista
	Normal
	Repetir todas
	Escuchar

Ecualización

NOR	Natural
PlayFX	Sonido Microsoft
ROCK	Rock
POP	Pop
CLASS	Classic
BASS	Bass
JASS	Jazz
USER	Usuario

✘ Modo reproducción / Modo EQ : ir a “modo repetición”/modo EQ de configuración .(para más detalles, por favor vea la sección “Configuración”.)


Modo Música

El reproductor soporta los formatos de audio MP2,MP3,WMA,FLAC,WAV.

En el icono de Música presionando levemente “M” ingresa al menú:

Toda la música	Muestra toda la música almacenada
Artistas	Muestra todos los Artistas o bandas de las canciones almacenadas
Álbum	Muestra todos los álbumes de las canciones almacenadas
Genero	Muestra los géneros de las canciones almacenadas
Listado	Listado de directorios
Grabaciones	Grabaciones realizadas por micrófono
Mis Favoritos	Listado de canciones Favoritas


Actualiz. Biblioteca Actualizar la biblioteca de medios

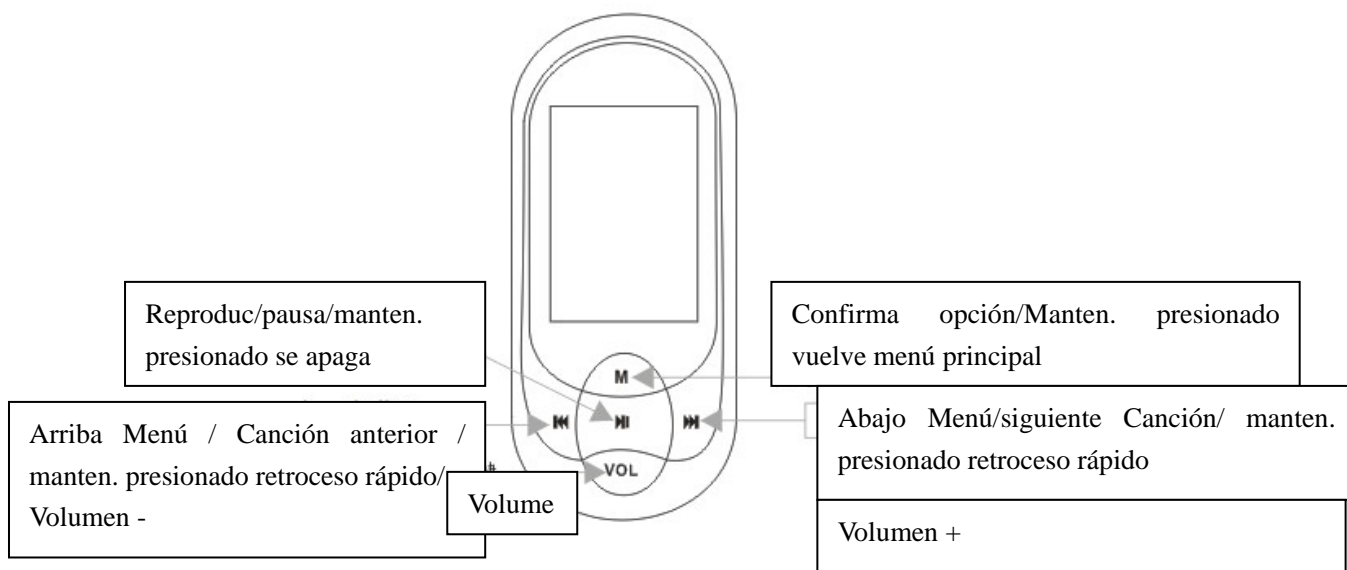

Video

Vaya al icono de Video y presione levemente “M” para entrar en le menú de Video.


El reproductor reproduce los formatos de video MP4/AVI.

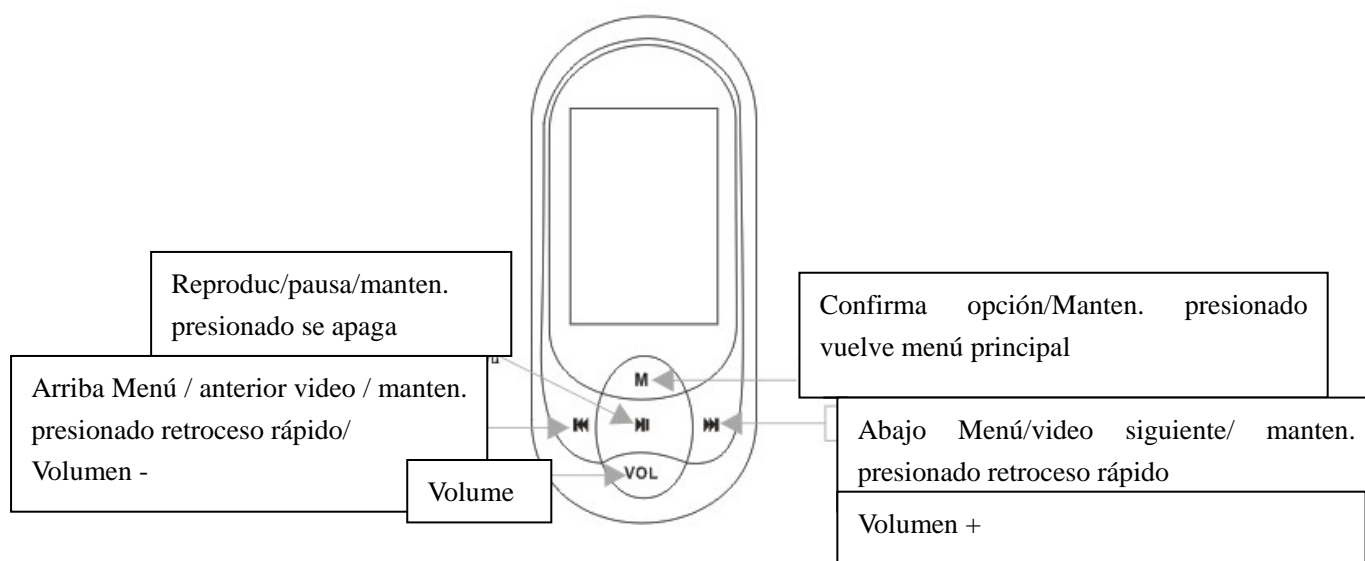

Radio FM

Vaya al icono de Radio-FM y presione levemente “M” para entrar.

El cable del auricular cumple la función de antena, elija la posición del cable para lograr una mejor recepción.

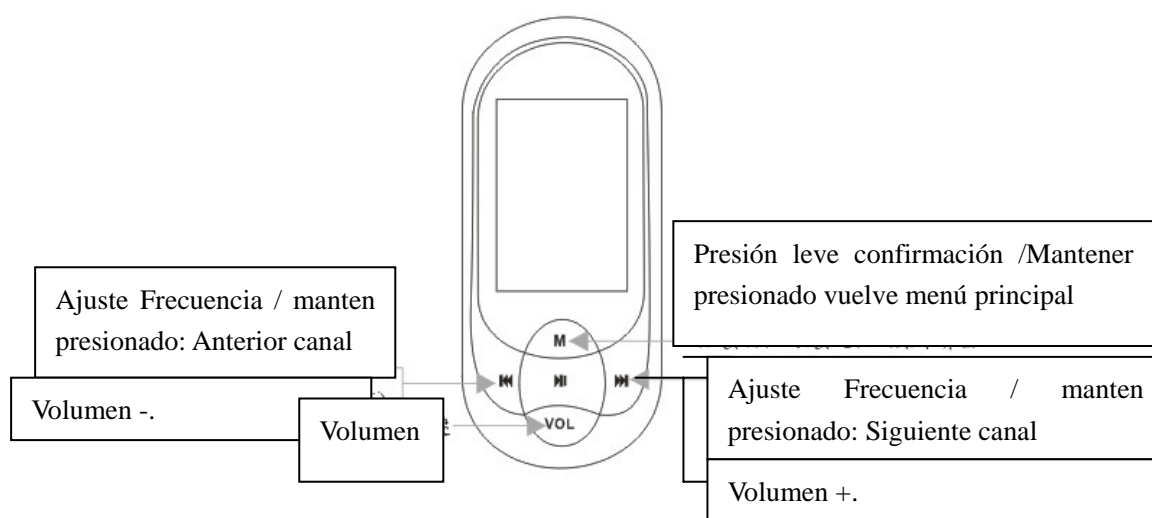

Dentro de la pantalla de la radio presionando levemente "M" aparece el menú:

Manual: seleccione esta opción y presione teclas de avance y retroceso para búsqueda manual de la frecuencia.

pre-establ.: Devuelve funcionalidad al modo por defecto.

Memoriza: Guarda la frecuencia de la emisora actual

Borra: Borra la emisora guardada


Auto: seleccione esta opción para comenzar una búsqueda automática de emisoras de radio.

✘ **Configuración de la Radio:** vaya a “Radio FM Config.” del menú “Configuración”.

Imágenes

Vaya al icono de Imágenes y presione levemente “M” para entrar.


El reproductor soporta los formatos de imágenes: JPG/BMP/GIF.

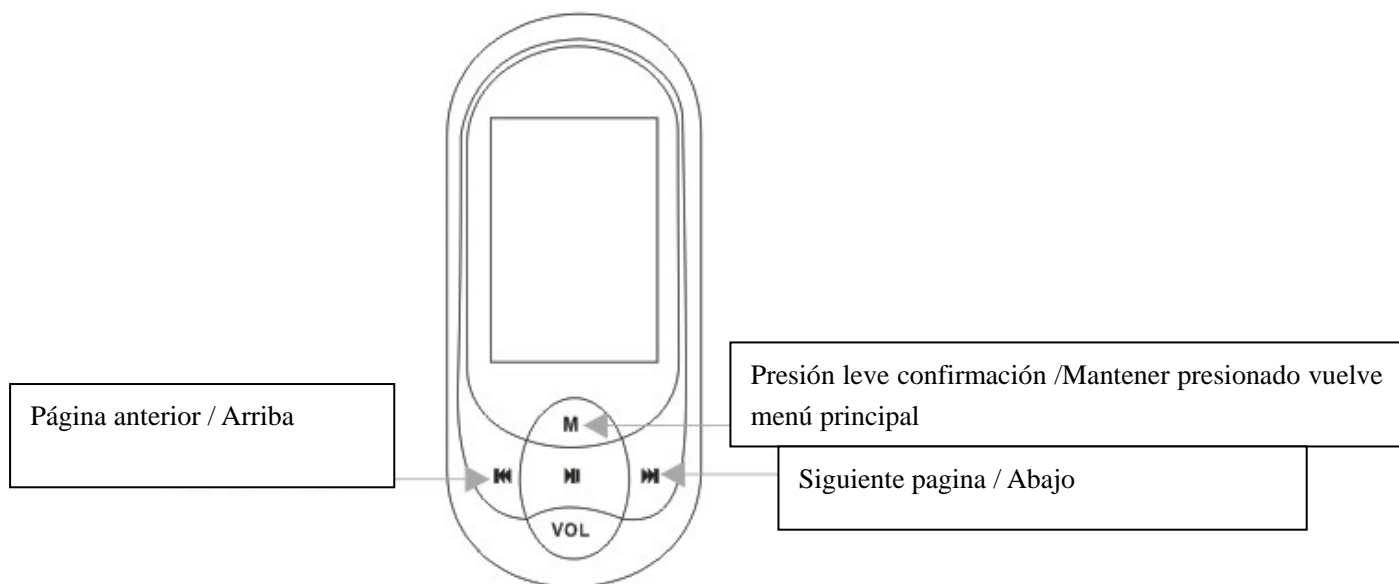

e-Libro

Vaya al icono de e-Libro y presione levemente “M” para entrar.

El reproductor soporta el formato TXT .

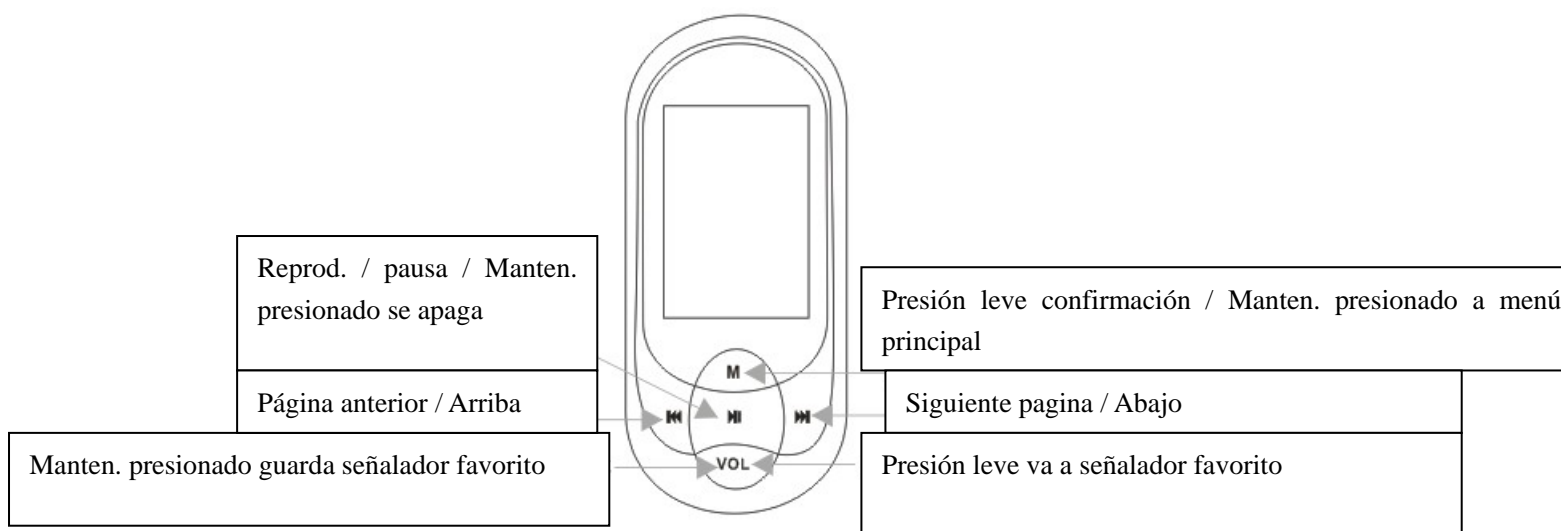

Grabar


Vaya al icono Grabar y presione levemente “M” para entrar.

Permite realizar grabaciones a través del micrófono del reproductor que luego pueden ser reproducida desde el menú "Grabaciones" del icono Música.

Navegación

Vaya al icono de Navegación y presione levemente “M” para entrar.

En esta opción explorar todos los archivos y las carpetas de la memoria del reproductor. También puede borrar archivos o carpetas.

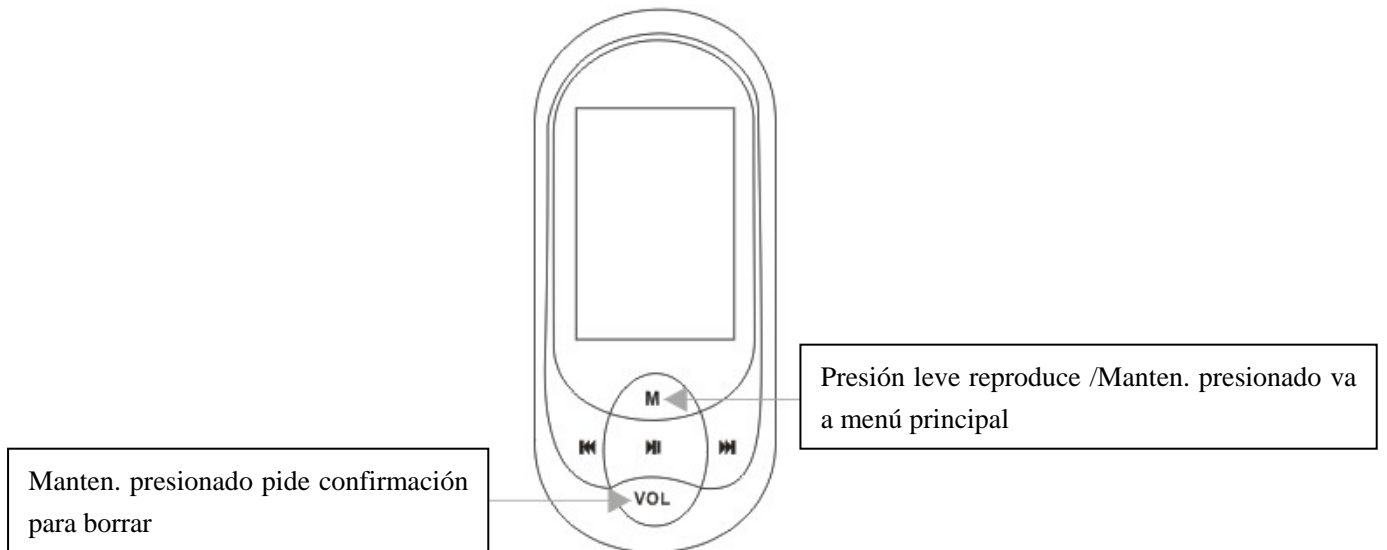

Juego

Vaya al icono Juego y presione levemente “M” para entrar.



Configuración sistema

Elija el icono de configuración y presione M levemente para entrar.

Las opciones de este menú son:

Música

- Modo Repetición: Permite cambiar entre distintos modos de repetición
- Modo Reprod.: orden de reproducción normal o aleatorio
- Seleccionar EQ : Permite seleccionar el modo de ecualización
- MS PlayFX Set: Permite seleccionar 3D surround o Bajo puro
- EQ Manual: Puede ajustar manualmente los valores de Ecualización.

Grabación: Permite seleccionar la calidad de grabación: Calidad Alta / Calidad Normal
e-Libro config.: Cambio Página, permite cambiar el lapso de tiempo en que cambia automáticamente de página, 2, 4, 6, 8 ó 10 Segundos

Radio FM config.: Permite activar o desactivar el estéreo, y cambiar la región de la zona de FM

Ajustes fotos: Permite cambiar el tiempo para pasar automáticamente entre foto y foto, 2, 4, 6, 8 ó 10 segundos

Mostrar

- Tiempo de Ilum.: Es el lapso de tiempo que dura iluminada la pantalla, 5, 10, 15, 20, 30 segundos o Siempre
- Contraste: Nivel de brillo entre 1 y 5
- Modo luz fondo: permite cambiar entre Modo normal o Ahorro de batería

Tiempo apagado: Permite cambiar el tiempo de apagado entre 10, 15, 30, 60, 120 minutos o Desactivar.

Lenguaje Permite cambiar entre 21 lenguajes

Sistema

- Información: en esta opción se puede ver la versión del firmware y la memoria usada.
- Actualiz.firmware: Después de descargar los paquetes de actualización, grabarlos en el reproductor y seleccionar esta opción.
- Ajuste por Defecto: Permite cargar la configuración por defecto

Salir Config.: Menu principal

Garantía y responsabilidad

El fabricante otorga una garantía por 24 meses para el reproductor y los accesorios suministrados. La garantía comprende los daños y los vicios relacionados con materiales defectuosos y confección imperfecta. La garantía no cubrirá los daños que ocurran por uso no reglamentario o inadecuado, o por reparaciones o cambios en el aparato efectuados sin la autorización del fabricante. El fabricante tampoco asumirá la responsabilidad por daños sufridos a causa de lucro cesante.

Soporte y Servicio técnico

Para cualquier consulta técnica puede acudir a su punto de venta o contactar con el servicio técnico de LEOTEC. Más información disponible en el sitio web: www.leotec.com o mediante el e-mail: soporte@leotec.com



User Manual



Contents

Character-----	18
User precaution-----	19
Charge for player-----	20
Format player-----	20
Connect to PC-----	21
Key sketch map-----	22
Screen display-----	23
Music -----	24
Video -----	25
FM radio-----	26
picture-----	27
Text-----	28
Record-----	28
Explorer-----	29
Game-----	29
System setup-----	30

Character and parameter

SNR >95dB

Output power 5mW+5mW(32 OHM)

Frequency response 20Hz - 20KHz

Support compacted rate 65Kbps-320Kbps

USB connector 2.0

Play format MP2.MP3.WMA

Record format WAV

FM range 87.0mHZ-108.0mHz

User precaution

Please check for missing accessories.

The player without waterproof function,so please don't place player near water source environment .or in the condition of high temperature place,and don't play liquid bottles on the player or put the player on a heat object.

Unexpected disconnection during formatting,downloading or uploading process may cause data loss or damage the player. (Our company don't have an duty on you data of player. we suggest you have a copy on other memory machine if there is important file.)

Charge for the player

Please charge player with the adapter which comes with the player .

For the quality of the battery ,when charging for the first time, please charge it after battery has been exhausted.(12 hours for the first charge time will be better) After the first charge ,it will only take 4 hours to charge it full.

When the player is connected to computer through USB cable ,it will be charged automatically. But we don't suggest charge in this way for long time.

Format the player

Please select "FAT" to formalize the player.

When the player is under formalization or transmitting files, removed directly is prohibitive.


Connect to PC

Use USB cable to computer. After connected correctly, the screen will display connecting icon. At this time, you could download or upload data files and music from the computer.

Don't take off the USB cable when your player connecting with computer and transmitting data. When removing the player from the computer, please click the "Safely Remove Hardware" sign. When the menu appears and the player show "remove safely", then you could remove it.

Key sketch map

playing music station:

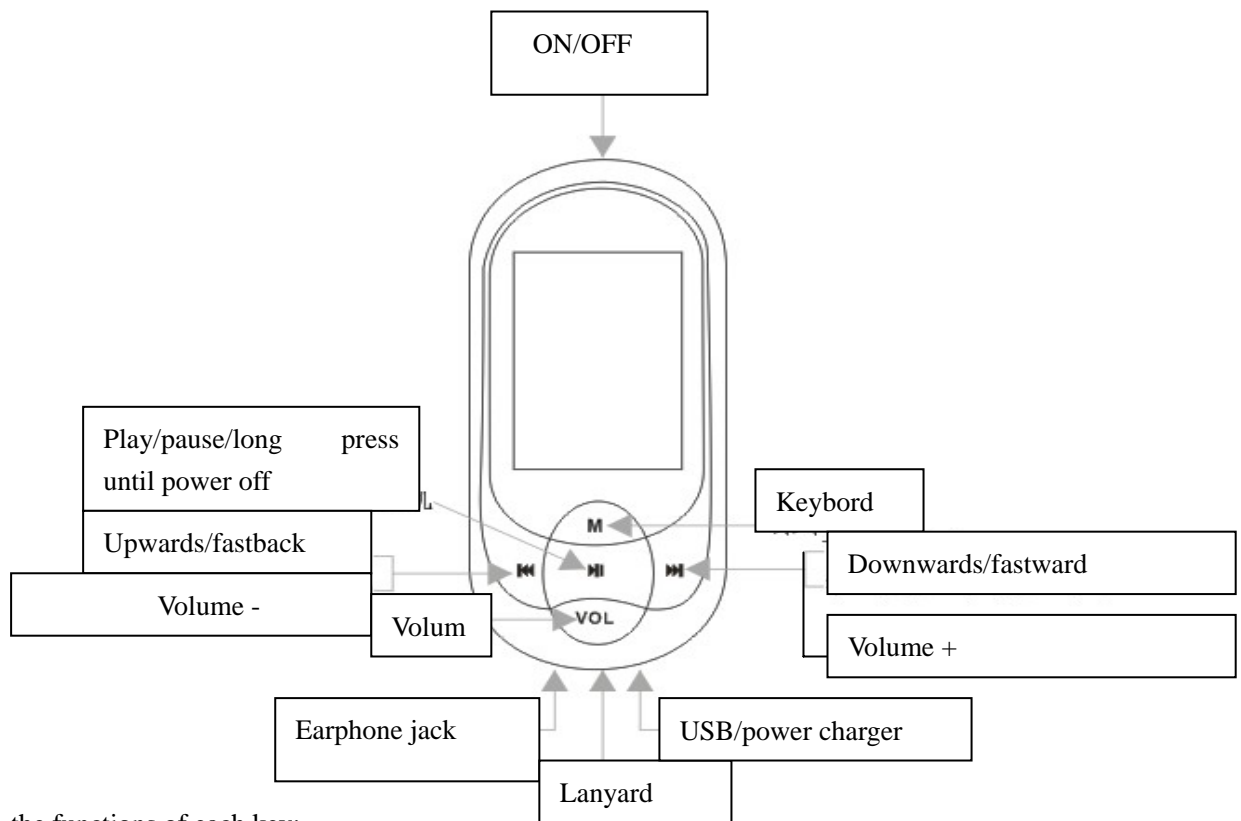

the functions of each key:

⏮/⏭ Upwards/downwards


⏮/⏭ To adjust volume when playing state

VOL "Volume keys ; in sub- menu under this button will pop-up warnings long , whether to delete the file"

M Choose confirm, long press to go back previous menu.

⏮ Mack sure the state is in power on, long press three seconds until power on

Screen display

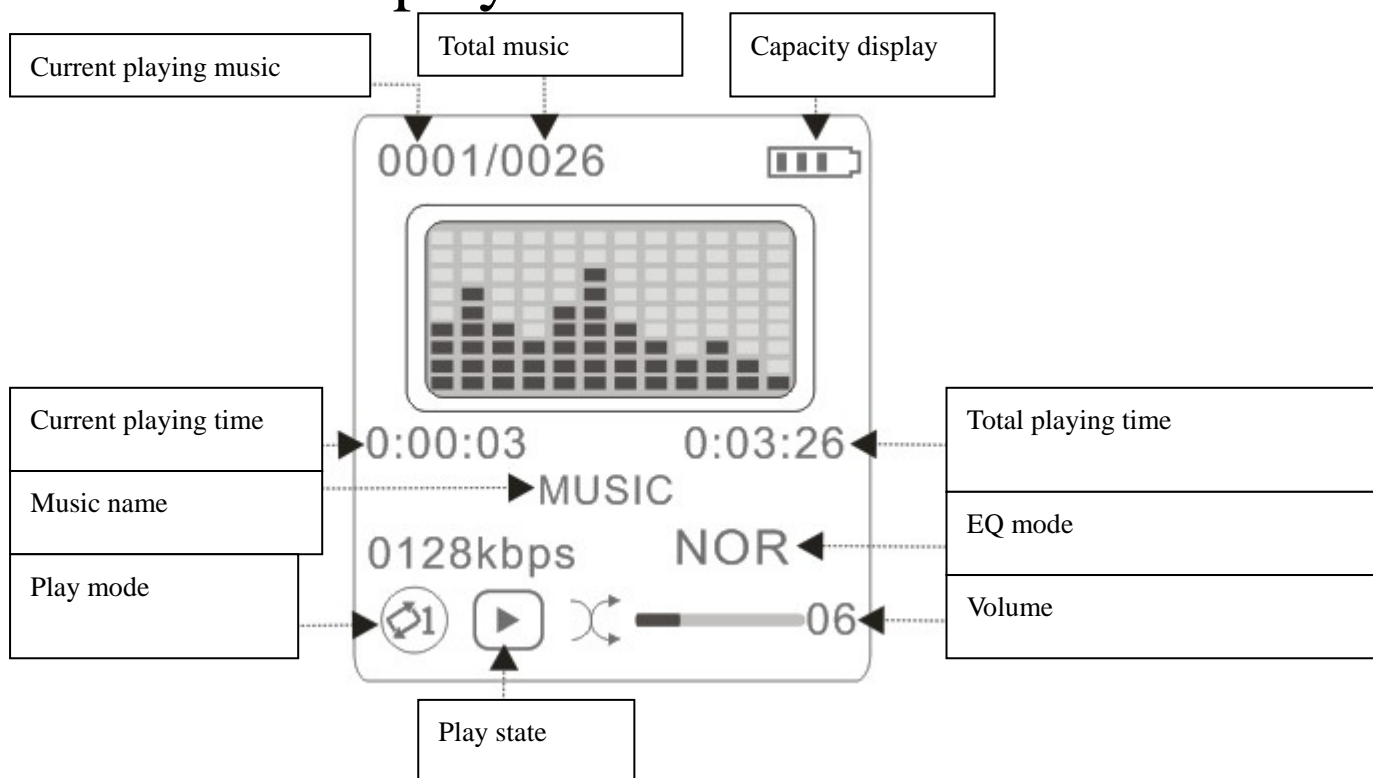

Play mode

EQ

	Single time
	Repeat one
	List
	Repeat list
	Normal
	Repeat all
	Try listening

NOR	Natural
PlayFX	Microsoft sound
ROCK	Rock
POP	Pop
CLASS	Classic
BASS	Bass
JASS	Jazz
USER	User

✳ play mode/EQ mode: please go to “repeat mode”/EQ mode of music setting to setup .(for more details ,please see the “setup” section.)

Music mode

The player support MP2,MP3,WMA,FLAC,WAV format and audio file.

In the state of music play, short press“M” enter to play menu , setup in play

menu : all music/artist/album/genre/my favorite/dir list/record/ medialib

update/breakpoint play

All music: preview all music

Artist: can display the singer or band’s information.

Album: can display the song’s name or the album which the song belongs to

Genre: can display related Genre

Directory listing: can display music documents

Record file : can display recording file

My favorite : can display collected file

Medialib update: can update medialib

Brokepoint play: can play on music to break


✘ In the state of submenu “All music/artist/album/genre”of medialib, long press “VOL”,enter to “delect file/ delect all/ exit”.

✘ Audio playing setting: go to the “Music setting”of” System setup” to setup.(for more details,please see the setting section)

Video


Choose video menu,short press “M” to enterto video menu interface.

The player supports MP4/AVI format

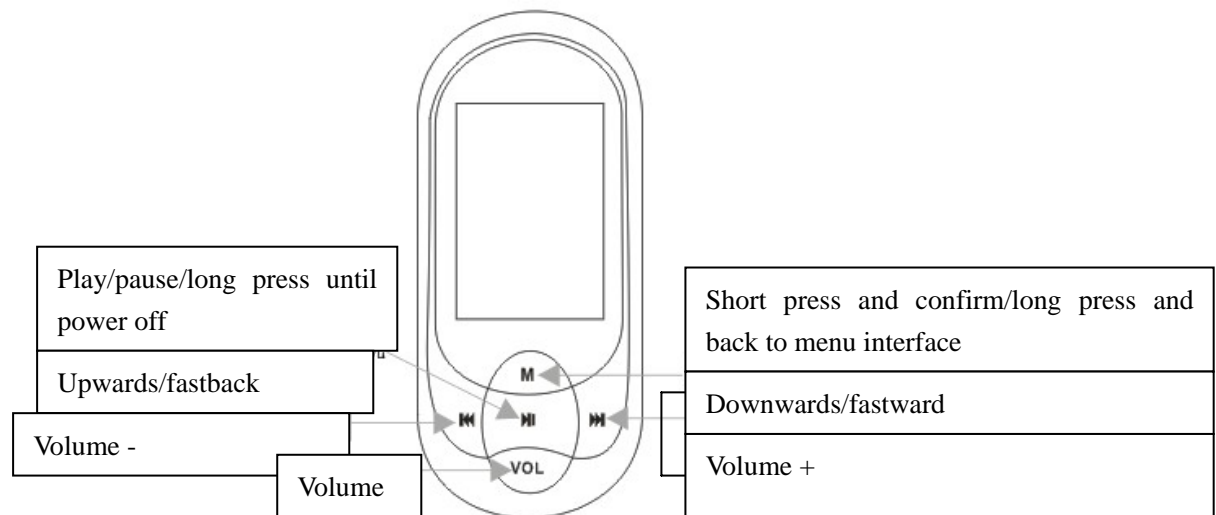

FM radio The function is available only with “FM”radio labeling player

If the player within channel, after enter FM radio menu to listen .(the earphone cable under the radio state to play a role of antenna,to adjust the location of headphone can reach a better listening effect if can not listen clearly.

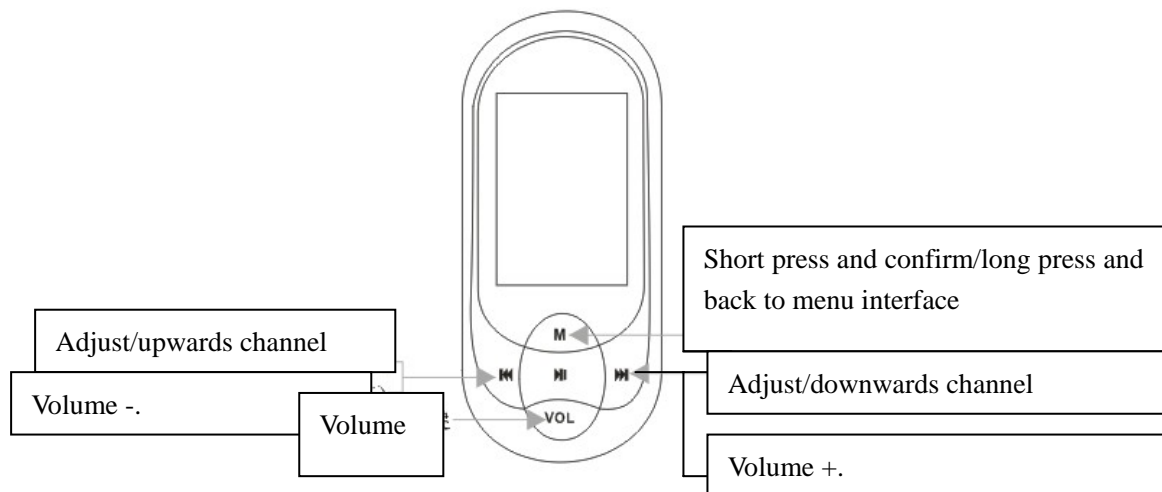

In the radio interface ,short press “M”to enter to the menu:

Manual: select this option and press arrow key to manually search for radio.

Default: restore functionality to the default mode radio

Save: save the radio to fixed position

Remove radio: delete saved stations


Auto: select the option to start automatically after a search and save the station.

✘ Radio setting: go to “radio setting” of “system setup” to setup.

Photo

Choose photo, short press “M” enter to photo interface.


Player support JPG/BMP/GIF format

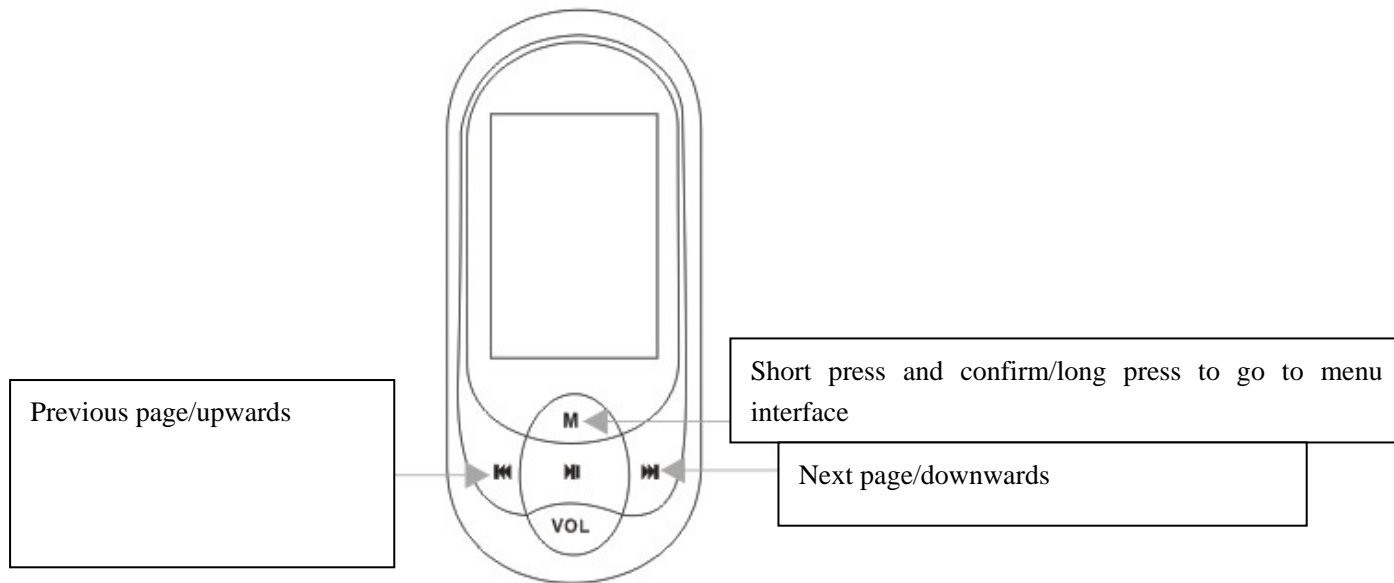

TXT

After choosing text menu ,short press “M” enter to text interface.

.Player support TXT format

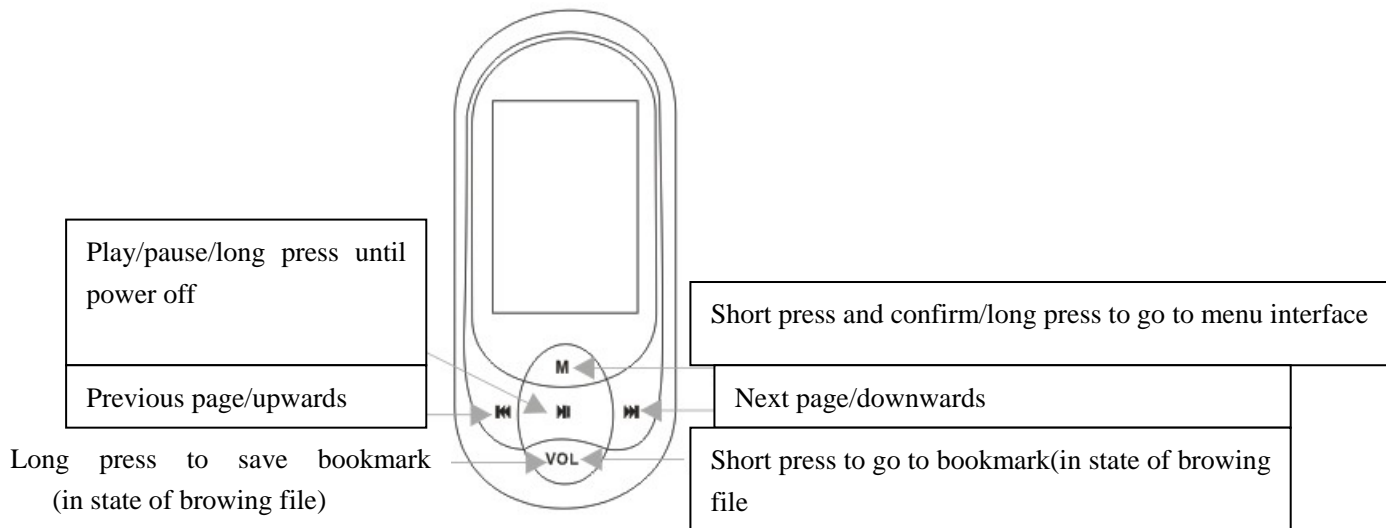

✘ TXT setting :go to “txt setting” of “system setup” to setup.(more details to see the system setup

Record mode


Choose record mode in main menu ,short press “M” enter to state of prepare recording.

Saved recording file can play from “record file” of “music mode”.

✘ **Record setting/playback setting: go to record setting/playback setting of “system setup”**for more details,please see the setting section


Explorer

In station of explorer, can browse all files of player and the contents of folders as well as can delete files

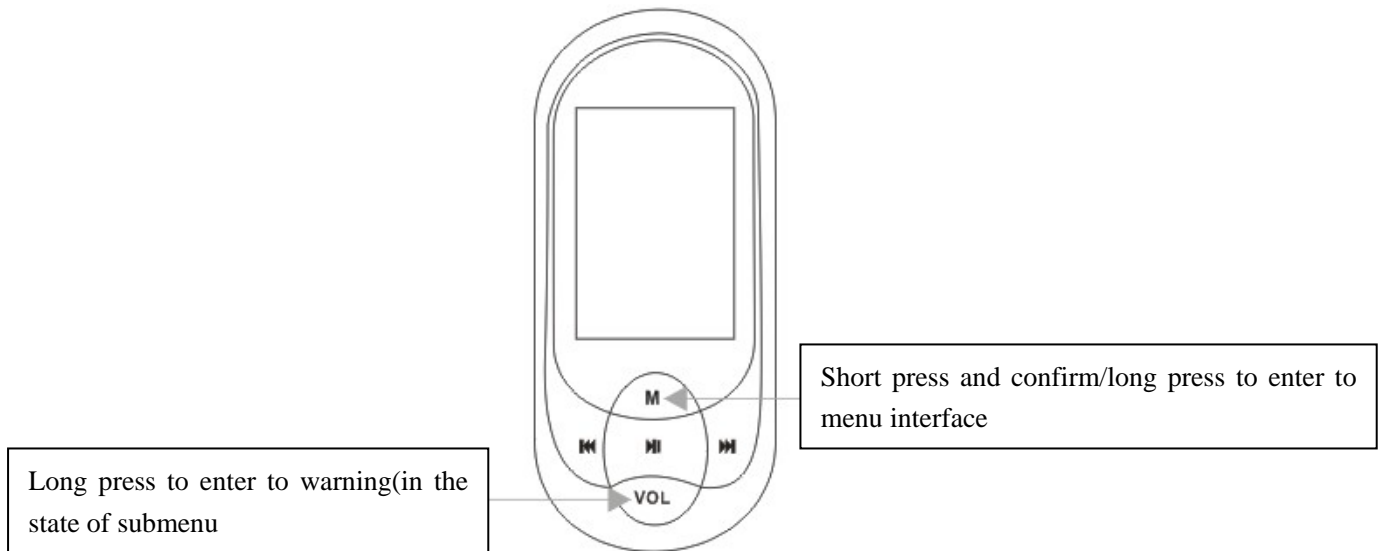

Game

Select game menu and press “M ”to enter to system setup interface.

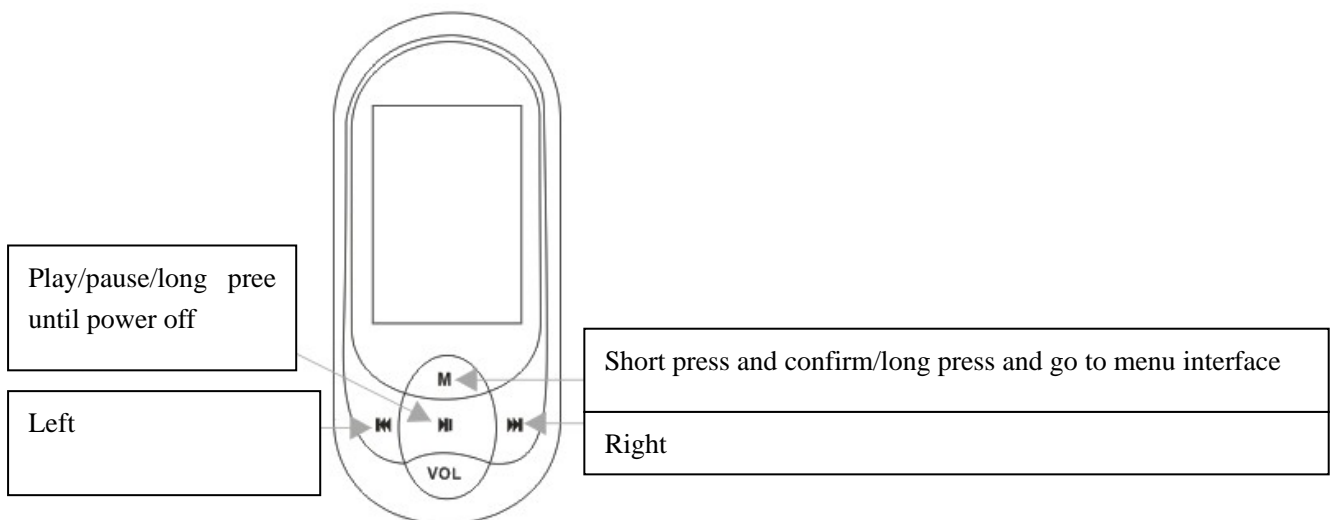

Settings

Choose system setup, short press "M" enter to system setup menu

It can be setup parameter in system setup menu

Audio setting

- Repeat setting: setting play mode
- Player setting: setting order of play/random play
- EQ select: setting EQ mode
- Microsoft EQ setup : setting 3D surround mode/ pure bass
- User EQ adjustment: can manually adjust the EQ value

Record setup: can setup the amount of high-quality record/normal quality

TXT setting: file browsers can be set to 1-5 seconds

Radio setting: can be set to stereo and radio region

Photo browser setting: can set the automatically browsing time of photo 2-4 seconds

Display setting

- Backlight time This setting is 5-30 seconds backlight time parameter ridge value/bright lights long for choice
- Contrast adjustment: can set the brightness 1-5
- Backlight mode: Can set normal mode/saving power mode

Sleep off time: this can set the sleep off value to 10-20 minutes

Language: can set player in the language of choice of 21 languages

System setup

- Product information: in this setting to view the usage of player
- Firmware upgrade: after downloading the upgrade packages of the player, stored within the player and selecting this option to upgrade the player

Exit the system setup: Back to the main menu

Guarantee and responsibility

The manufacturer gives a guarantee for 24 months for the player and the accessories provided. The guarantee includes the damage and defects related to defective materials and imperfect preparation. The guarantee does not cover the damage that can occur for incorrect or inadequate use, or for repairs of changes in the apparatus made without the authorization of the manufacturer. The manufacturer does not assume the responsibility for damage incurred due to redundant profit.

Support and Technical Service

For any technical consultation you can go to the place of purchase or contact the technical service of LEOTEC. There is more available information in the website: www.leotec.com or by means of the e-mail: support@leotec.com