

Leotec Fitness Multisport

LEPFIT06

User Manual

Product parameters

Body Size: 49.0*19*10mm Wristband Size:252mm

Weight:17.8g

Screen: OLED

Battery: Built-in rechargeable lithium battery

Battery capacity : 75 mAh

Bluetooth: Bluetooth 4.0, Working range 10-15m

Waterproof level: IP67


Working condition:-20~60°C

System requirement: iOS8.0 or above

Android 4.4 or above, Bluetooth 4.0

Put on your smartband


Put on the smartband,
when you feel
shown in the figure).

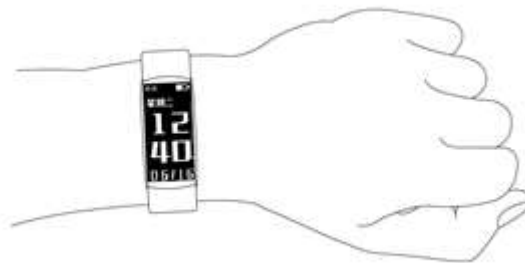


wear appropriately
comfortable (as


Gesture Control

Methods of displaying screen: touch screen, raise hand, turn over the wrist.

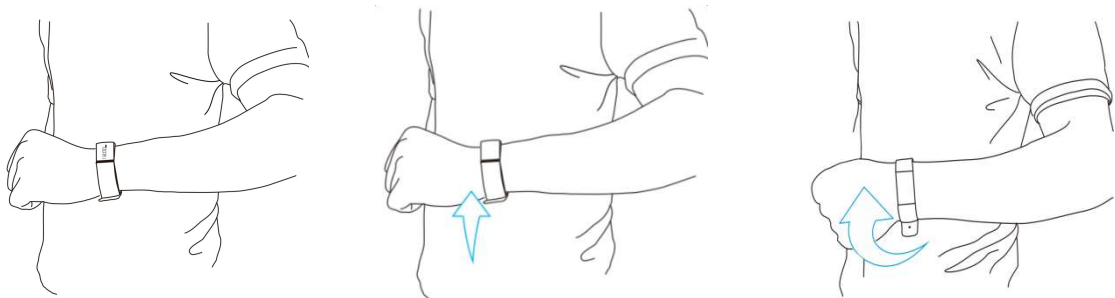

Function Icon

Off: 


Start : 

Time: **12**
40


Call ID Display: 

Sedentary Reminder: 

Schedule: 


Training: 

No Disturbing started : 


Restore set 


Date: **06/16**


Stop: 


Function Set: 

Find Phone: 


Steps: 

Dial: 


Information: 

No Disturb(off): 

Day Of Week: **Mon**


Bluetooth: 


Alarm Clock: 

Remote Camera Control: 





















Calories(kcal): 

Message: 

Distance: 

No Disturb(on): 

Touching

Functions	Operation
Turn on	Long press the screen 
Turn off	Touch screen icon to  , click on the screen to switch  , then long press
Switching first-level directory	Slide the screen up or down 
Switching secondary directory	Click on the screen 
Confirm	Click on the screen 
View and delete message	Switch to interface  , click screen to view the message Switch to the interface you want to delete the information, long press the screen
Enter sports	Switch to interface  , click on the screen to select the type of motion After selecting the exercise, press the screen, the motion icon flashes means to enter the motion
Dial switch	Slide the screen to interface  , click screen to  , long press the screen, click switch dial style, long press the screen after selecting style
View walking data	Switch to the time display, click screen, view the number of steps  , calories  , distance..... 
Turn on the No Disturb	Switch to interface  , click screen to  , then long press the screen After the No Disturbing mode is started,  will be displayed at the top of time interface on the homepage to prompt the No Disturbing mode has been started.
Turn off the No Disturb	Switch to interface  , click screen to  , then long press the screen
Reset	Switch to interface  , tap screen to interface  , long press to enter dialog window for confirmation. If you select "yes", the bracelet will be

	unbinded and the schedule, message, alarm clock data in the bracelet will be erased.
Schedule Alarm Clock	Set in the " Zeroner Health Pro "App

Application download


Search "Zeroner Health Pro" on App Store, Google Play, or scan the QR code below to download the App and install it.

Register: Open the "Zeroner Health Pro" App and log in if you have an account, or register a new account.

After a successful connection, time and motion data will be synced, Sleep Monitoring, Message Push, Call Remind will turn on.

Charging

Please charge the bracelet for 45 minutes before using . Please press the back of bracelet which

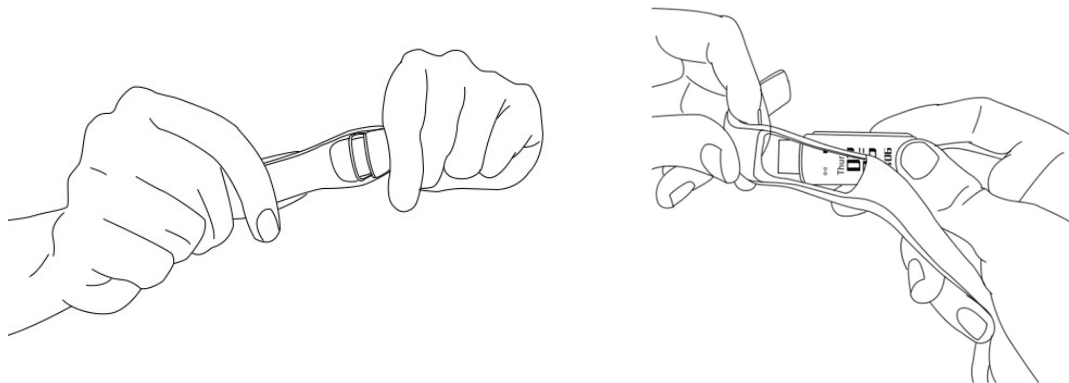

shows "OPEN" to make the host depart from the strap , then take out the host. Insert the host face down to a 5V/1A USB port for charging.

Activity/Sleep track

Equipped with a variety of sensors within the bracelet, worn on the wrist can easily identify and record the movement and the sleep status and data.

Pairing the bracelet and "Zeroner Health Pro" App, then you can view the previous day's sleep data in the App.

FAQ

Q: When connected with App, the data SYNC is finished but the time on the device displays incorrectly.

A: Restart the bracelet and try data SYNC again.

Q: Why my bracelet has no Call ID Display?

A: **Android:** After being connected with bracelet with App, please allow "Zeroner Health Pro" to visit calls, SMS, contacts and keep "Zeroner Health Pro" running in background. If there are security softwares on your phone, set up the software "Zeroner Health Pro" as "trust" .

iOS: If no Call ID Display, please restart your mobile and reconnect the bracelet. When it is connected, please wait until the phone pops up "Bluetooth pairing request" and click "pair" , then the Call ID Display function comes.

Q: The bracelet icon shows the Bluetooth was connected, but the App cannot SYNC data?

A: It is caused by the Bluetooth of the phone in general. Please switch off the App first, restart the Bluetooth and repair. If the above step does not work, please restart your phone and try again.

Q: Why my smartband is disconnected with my phone frequently?

A: Please check if your phone or other security software sets "Zeroner Health Pro" as trusted App or not. If not, please set it as trusted and try again.

More questions, please refer to the instructions for use in the "Zeroner Health Pro" App.

Precautions

Prolonged exposure may cause skin irritation or allergic to some users. If you find any skin redness, swelling, itching or other allergic symptoms, please discontinue use or wear it over clothing. Continue to use, even after the symptoms subside, it may make the symptoms recur even worse. If symptoms persist, please consult your doctor.

•This product contains electronic components may cause injury if not done correctly.

- This product is not for diagnosis, treatment or prevention purposes.
- In driving or other potentially dangerous situations due to distractions, do not view call notifications or other data.
- This product is not a toy. Do not allow children or pets touch your products and devices. This product contains small parts that may cause smothering interest rate risks.

Nursing and wear considerations

- Periodically clean, especially the parts in contact with the skin. Use a clean, moist cloth.
- Keep the band away from hot water and Non-toxic,but no contact with the acid-base.
- Wear loose, to ensure that the air circulation.
- Remove the product from time to time, in order to clean, but also let the skin freely.
- Do not open the housing or demolition.
- If the display is broken, do not use.
- This product and its battery contains substances may be harmful to the environment, but also may be due to damage caused by improper handling or operation.
- Do not place the product in the washing machine or drying machine.
- Do not expose your product to extremely high or low temperatures.
- Do not sweat in the sauna or steam room to use the product.
- Do not make the product for a long time by the direct sunlight.
- Do not place the product in a fire process. The battery may explode.
- Do not use abrasive cleaners to clean the product.
- If the product gets wet, do not charge.
- If you feel product in the heat, remove it.

Built-in battery precautions

- Your product is equipped with built-in battery, the user can not replace. Product damage, or attempt to open the product will void the warranty and could pose security risks.
- Use certified by a recognized test computer charging treasure or power to charge the battery.
- Charge the battery in accordance with the instructions in this guide.